

Motor Controller Guide: Bafang M400 Motor

Bafang M400 motor controller is attached to the motor on the non-drive side. Remove the black plastic motor cover to access

