

Merida BIG.NINE / BIG.SEVEN 2017 outer gear cable replacement


Important Notes

- First remove the old inner gear cable
- Do not pull-out the old outer gear cable at this point
- A cable guide is located inside the BB shell
- Trim the new outer gear cable to the exact length AFTER installation

- Remove the Smart Entry



- Loosen the cable guide bolt by 3- 4 turns, DO NOT fully remove the bolt

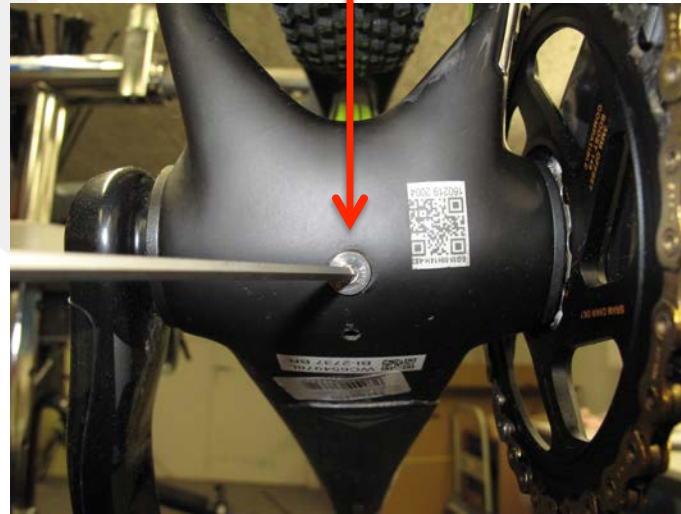


Merida BIG.NINE / BIG.SEVEN 2017 outer gear cable replacement

- Connect the new outer gear cable to the old outer gear cable at the rear (derailleur) end
- Use SRAM's Barb Connector or a similar device to connector the two cables




- PUSH the new outer gear cable through from the rear
- DO NOT pull hard on the old outer gear cable – gently pull the cable from the front – make sure the two cables stay connected

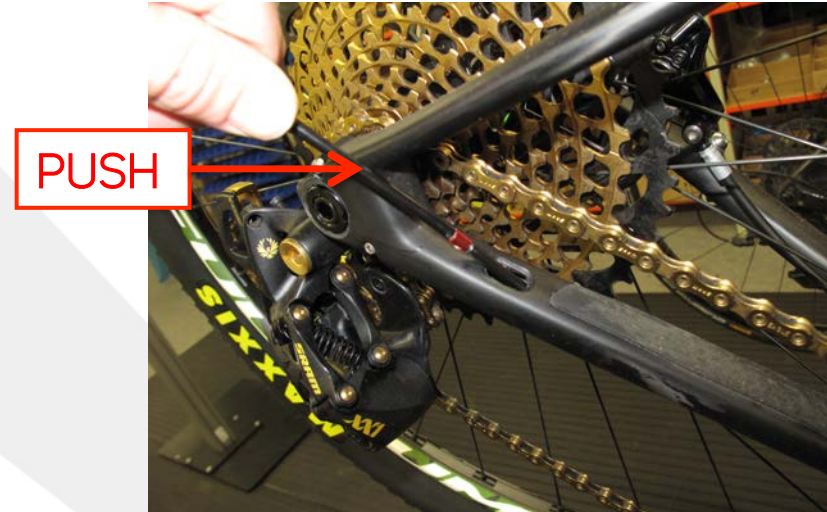

Merida BIG.NINE / BIG.SEVEN 2017 outer gear cable replacement

- Push the new outer gear cable through until the connector leaves the frame at the front
- Pull the new housing as far as needed

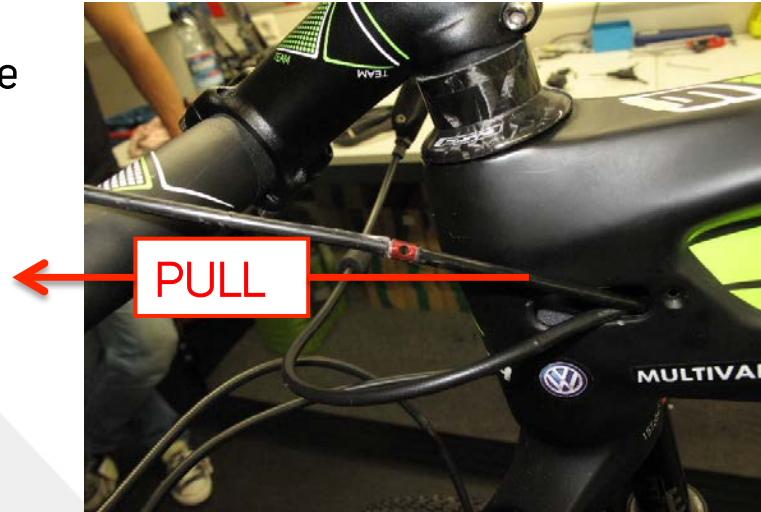

- Cut the new outer gear cable as needed
- Re-install all cable guides and fix the BB cable guide
- Route the new inner gear cable cable as usual

